




Remove backplate from canopy face.

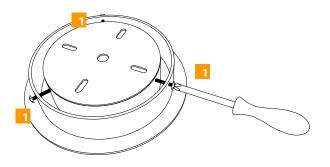


2 Loosen strain relief screw releasing the rubber strain relief bushing.

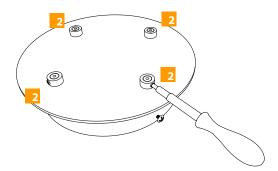

3 Remove rubber strain relief bushing and insert onto the COAX, adjust to desired length on the COAX.

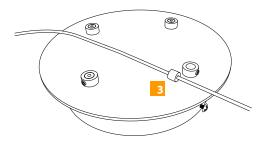

4 Reinstall rubber strain relief bushing with COAX. Tighten down on the strain relief screw securing the fixture and COAX at its desired length.

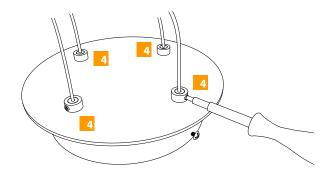

- 5 Mount the backplate to the ceiling, and wire the canopy into the power source.
- 6 Attach canopy face with fixtures to the canopy mounting plate.

