




- 1 Twist cap a few degrees to remove from fixture housing
- 2 If lamp is already installed, gently unplug lamp from socket wiring

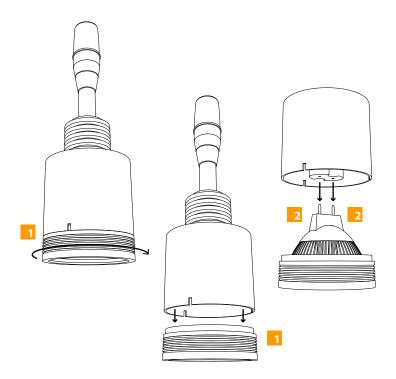


Insert a small hex key, push pin, or paper clip into one hole in the lamp retaining ring and twist counter clockwise to unscrew

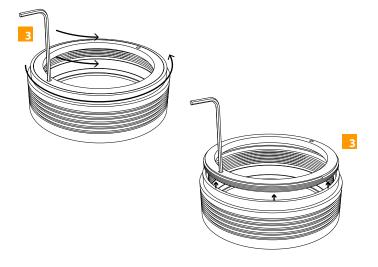

- 4 Set lamp in cap
- 5 Replace retaining ring and screw down until snug against lamp

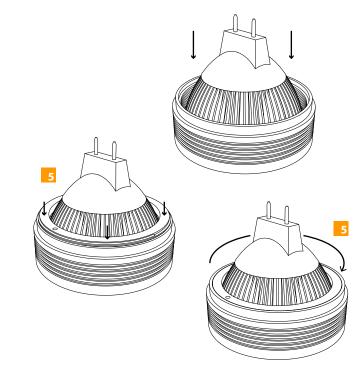

- 6 Plug lamp into fixture socket
- 7 Gently twist cap and lamp assembly into fixture body

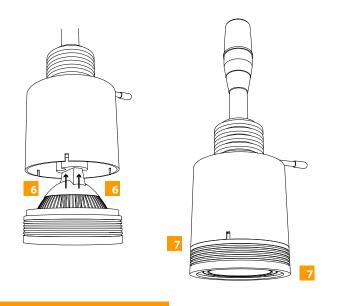

SAVETHIS INSTRUCTIONS