


This product is suitable for indoor dry locations only. This product can be dimmed with a standard incandescent dimmer.

This instruction is for the following models:




5 Light Canopy - (CPLVRN5)


7 Light Canopy - (CPLVRN7)

13 Light Canopy - (CPLVRN13)


25 Light Canopy - (CPLVSQ25)




- 1 Remove the #8-32 screws on the sides of the canopy housing.
- 2 Lift the mounting plate from the canopy housing.

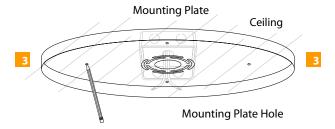


Align the mounting plate holes with the electrical box holes and mark four points onto the ceiling through the mounting holes.




- 4 With a hammer tap the anchors at the marked points into the ceiling up to the threaded portion.
- 5 Screw the anchors in the rest of the way with a Phillips screwdriver.

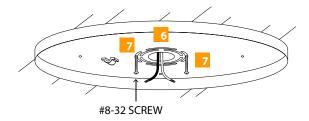

- Feed the power line wires through the mounting plate center hole.
- 7 Line up the two mounting plate slots with the electrical box holes and use the two provided #8-32 screws to mount it to the electrical box.

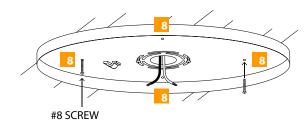


8 Secure the mounting plate to the anchors with the 4 provided #8 screws.

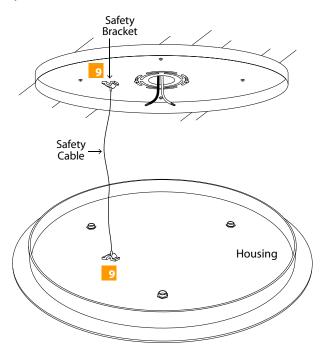


Insert one end of the safety cable into the mounting plate safety bracket and insert the other end into the housing safety bracket.




- 10 From the end of the cord, strip the outer insulation 4" using a sharp knife. MAKE SURE NOT TO CUT INNER WIRES.
- 11 Strip 1/4" of insulation from the inner insulated wires.

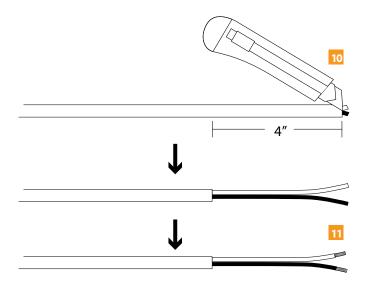


- 12 Feeding the cable through the port in canopy.
- tighten the strain relief screw on the side of the port once the wire is fed to the proper length.

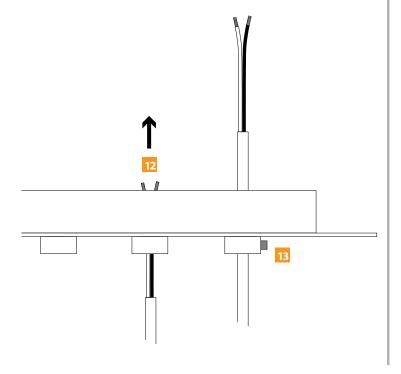

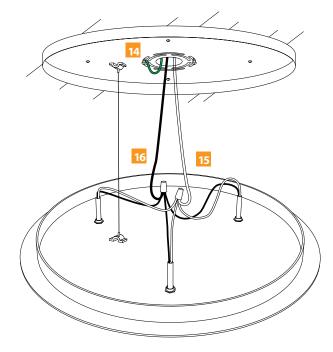

- Make sure the mounting plate is grounded in accordance with local electrical codes.
- Connect the housing white wire to the neutral power line wire with a wire nut.
- Connect the housing black wire to the hot power line wire with a wire nut.
- 17 Place all wires and wire nut connections properly inside the housing.

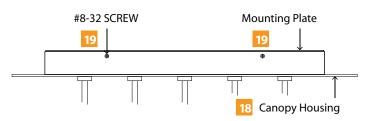

- 18 Slide the housing onto the mounting plate and line up the housing holes with the mounting plate holes.
- 19 Replace and tighten the #8-32 screws to secure the housing in place.
- 19 Turn the power on.