


Installation instructions for: CSWALANC Powered Anchor

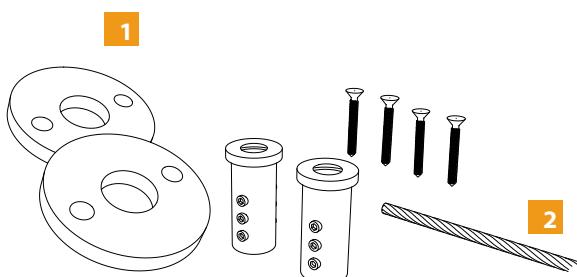


1 Unpack all items


2 Lay cable out




5 Tighten down set screws on 1.5" round cylinder so the cable is secured.

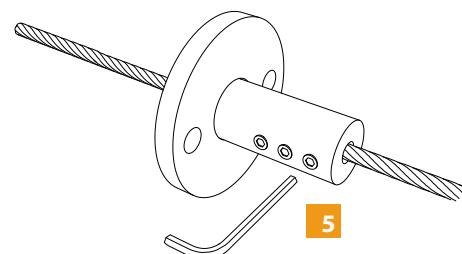


3 Feed cable through 1.5" round cylinder for holding cable.

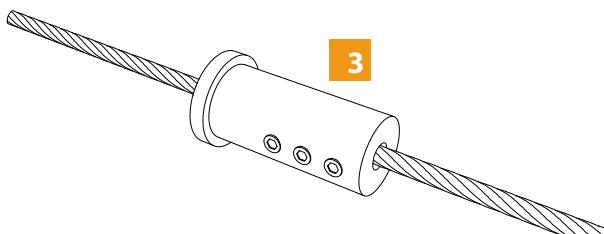




6 Wire the cable.

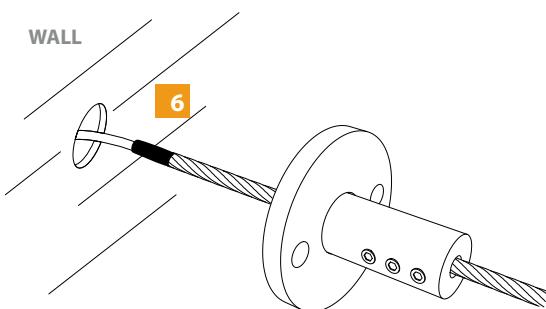

4 Feed cable through 1.75" round wall mount piece.

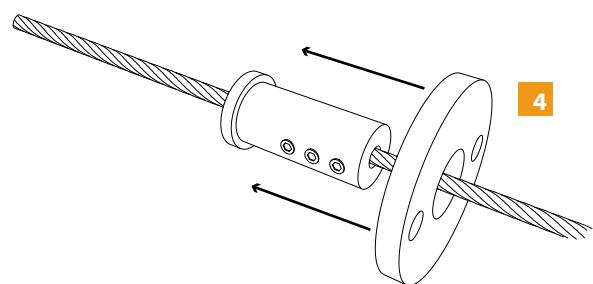

7 Pull all parts together and mount into the wall with the screws.

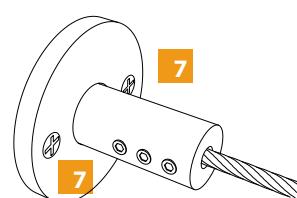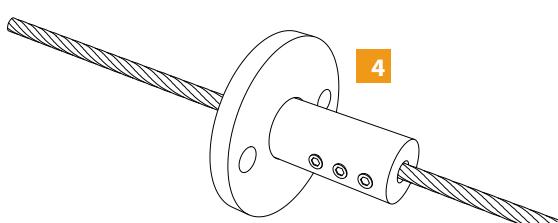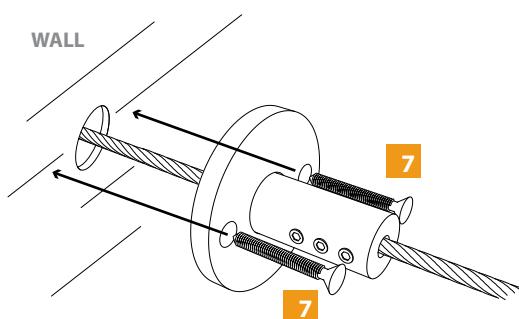

8 Repeat.

9 Power.