


## 3,5,7 & 13 Light EZ Jack Canopy

This product is suitable for indoor dry locations only.  
This product can be dimmed with an ELV dimmer only.  
This instruction is for the following models:




- 3 Light Canopy - (CPEJRN3)
- 5 Light Canopy - (CPEJRN5)
- 7 Light Canopy - (CPEJRN7)
- 13 Light Canopy - (CPEJRN13)


**CAUTION:** Assembled chandelier is heavy! Blocking (ceiling reinforcements) and/or additional hardware not supplied with this canopy may be necessary for safe mounting.

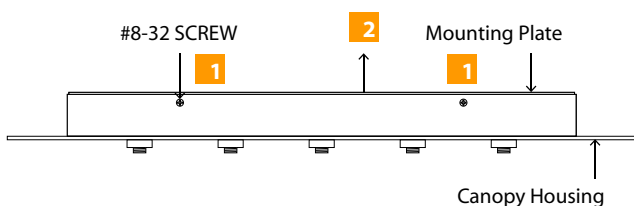


- 1** Remove the #8-32 screws on the sides of the canopy housing.
- 2** Lift the mounting plate from the canopy housing.

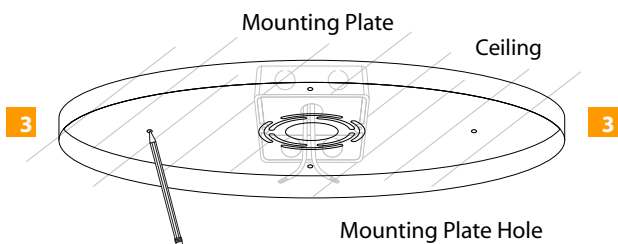


- 3** Align the mounting plate holes with the electrical box holes and mark four points onto the ceiling through the mounting holes.

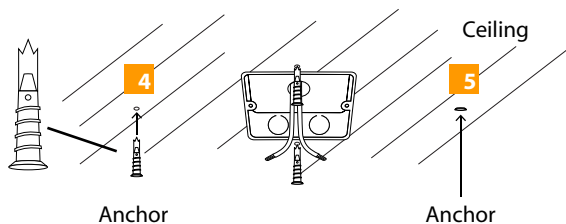


- 4** With a hammer tap the anchors at the marked points into the ceiling up to the threaded portion.
- 5** Screw the anchors in the rest of the way with a Phillips screwdriver.

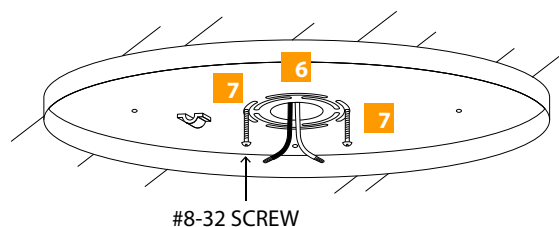


- 6** Feed the power line wires through the mounting plate center hole.
- 7** Line up the two mounting plate slots with the electrical box holes and use the two provided #8-32 screws to mount it to the electrical box.

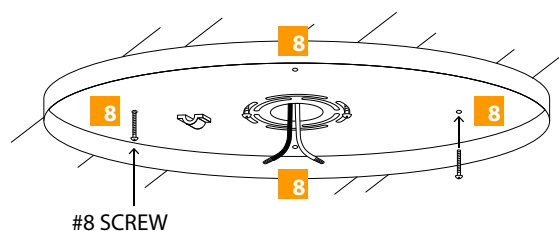


- 8** Secure the mounting plate to the anchors with the 4 provided #8 screws.

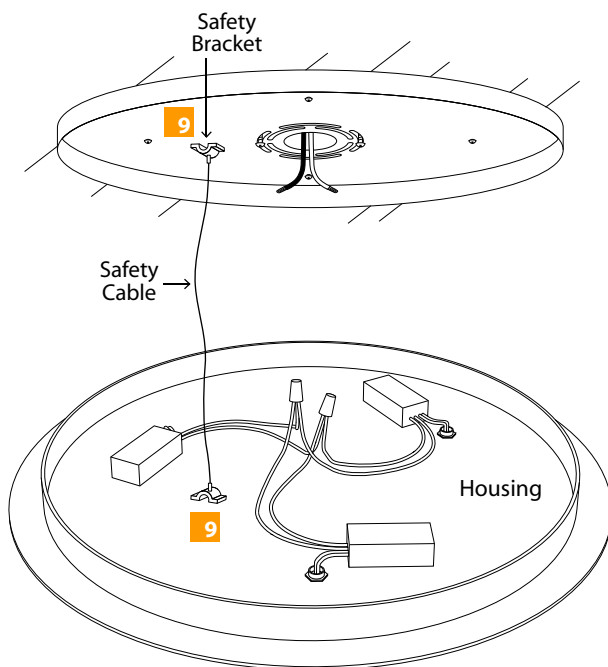


- 9** Insert one end of the safety cable into the mounting plate safety bracket and insert the other end into the housing safety bracket.

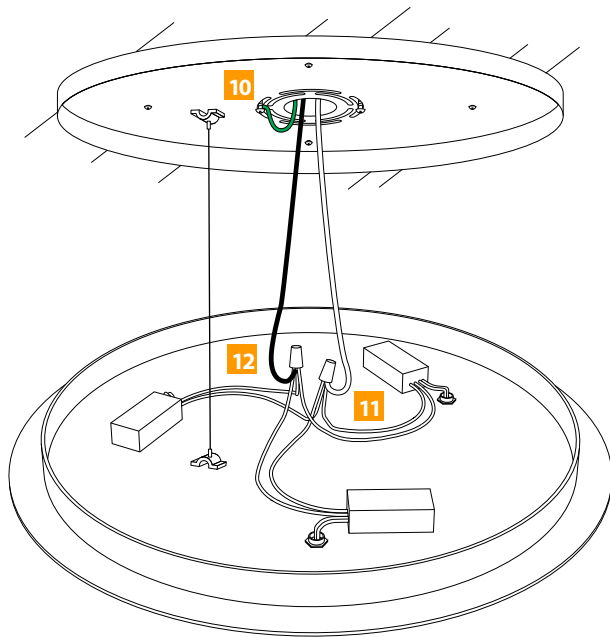

- 10** Make sure the mounting plate is grounded in accordance with local electrical codes.
- 11** Connect the housing white wire to the neutral power line wire with a wire nut.
- 12** Connect the housing black wire to the hot power line wire with a wire nut.
- 13** Place all wires and wire nut connections properly inside the housing.

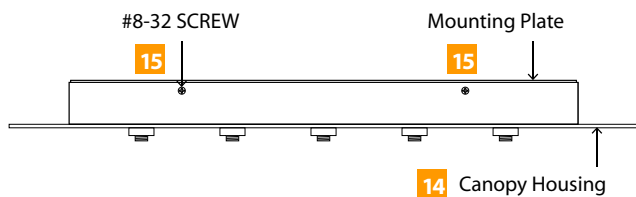

- 14** Slide the housing onto the mounting plate and line up the housing holes with the mounting plate holes.
- 15** Replace and tighten the #8-32 screws to secure the housing in place.

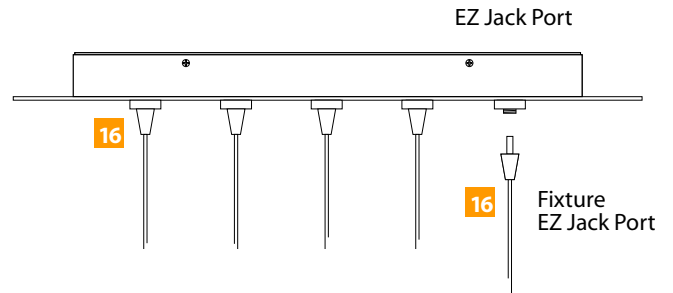

- 16** Screw each fixture EZ Jack completely into the EZ Jack port.
- 17** Turn the power on.