



Installation instructions for Cluster 7 CPCLUST7




1 Loosen Set Screws with allen wrench.

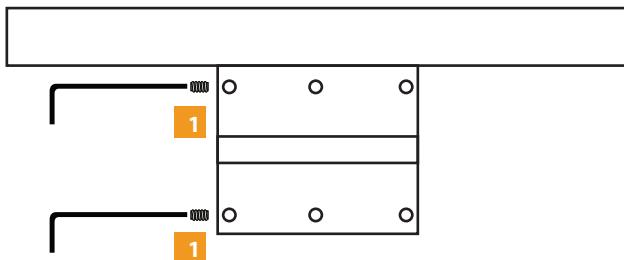


2 Strip 1/4" from end of the inner wire.

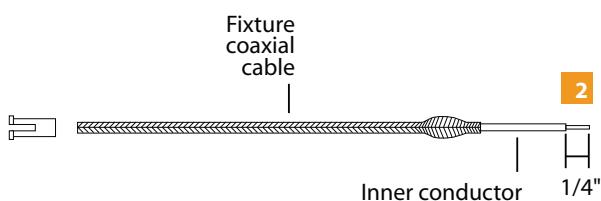


3 Slide slotted flared end Strain Relief down coaxial cable.

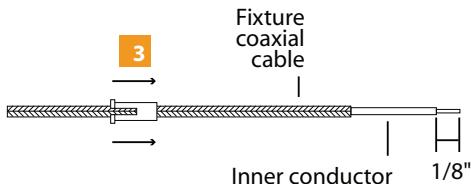

4 Slide slotted flared end Strain Relief into corresponding hole with slot oriented 90° away from set screw.

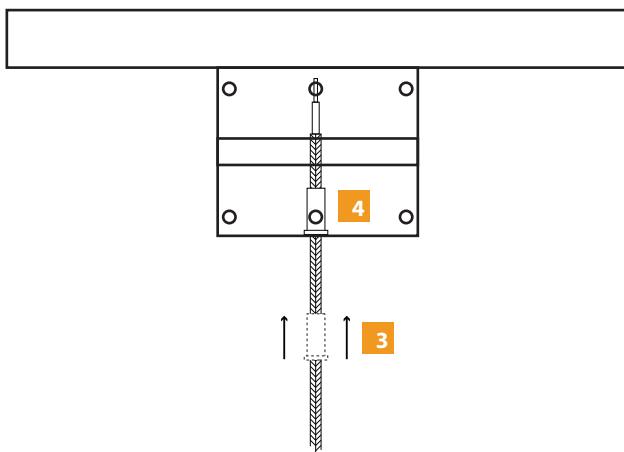

5 Push Coaxial cable all the way down until it stops.

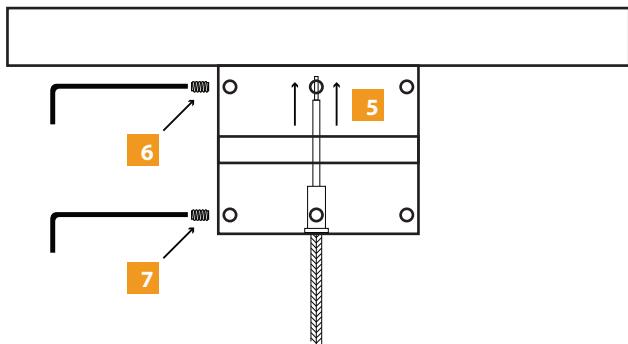

6 Once the Coaxial cable stops, tighten set screw snuggly.

7 Make sure outer braided coaxial is inserted all the way into the flared strain relief then tighten set screw on flared strain relief

8 Repeat these steps for all 7 pendants.

9 To achieve this look install Ring included as shown.

