

**SAVE THESE INSTRUCTIONS**

**CAUTION: RISK OF FIRE:**

Never replace a Xenon (Xelogen) lamp with a regular Halogen lamp.


A regular Halogen lamp requires a protective glass shield.

- This product must be installed by a qualified electrician.
- Turn off power at circuit breaker before installing.
- To reduce risk of fire or electrical shock use this fixture indoors only.
- This product is **ETL** listed and suitable only for indoor dry locations and approved for use at any height above the finished floor.
- Use MAX 35 Watt, Type Xelogen (Xenon) Bi-Pin Lamp.




**INSTALL THE LAMP & SHADE**

**1** Push the lamp completely into the socket.

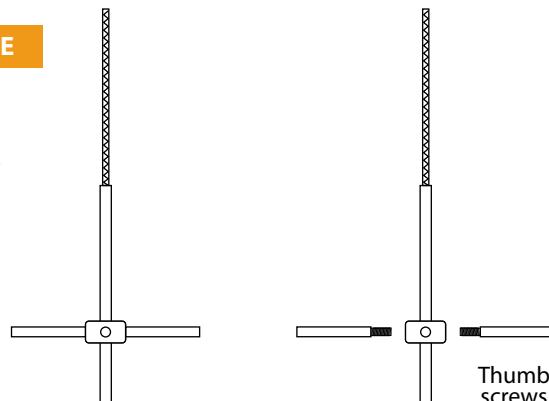


**2** Remove the three thumb screws.

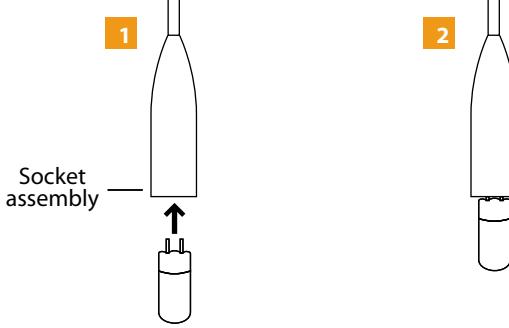


**NOTE:**

Use only your fingers and soft cloth to replace the lamp.

Use MAX 35 Watt, Type Xelogen (Xenon) Bi-Pin Lamp.

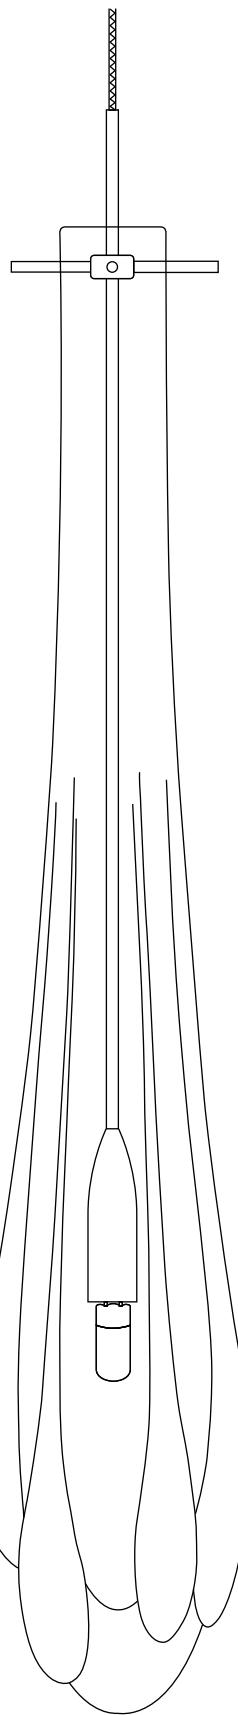



**3** Place the glass shade completely into the ring and tighten the three thumb screws to secure the glass shade in place.

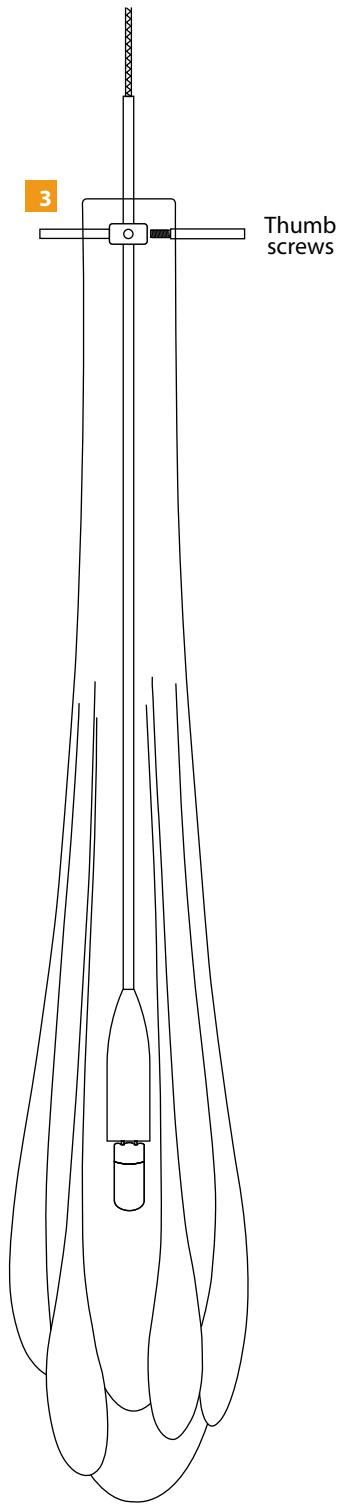


#### ADJUST THE FIXTURE HEIGHT

**1** Cut the coaxial cable to the desired length with a sharp cutter. The overall fixture height (H) is measured from bottom of the glass shade to end of the coaxial cable.

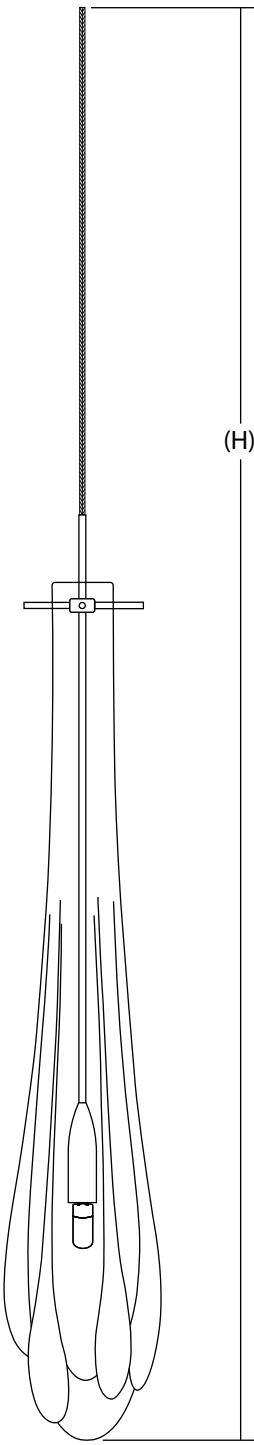

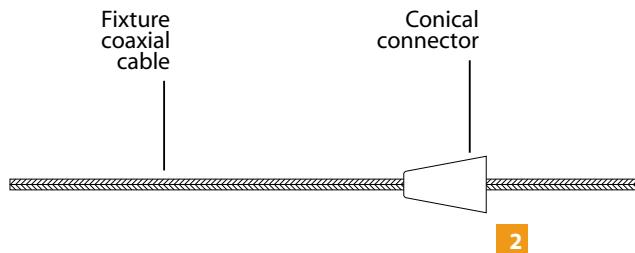

**2** Insert the fixture coaxial cable through the conical connector

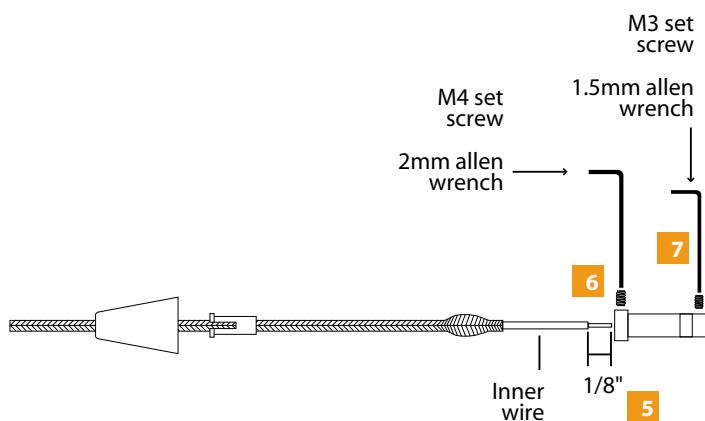


**5** Strip 1/8" from end of the inner wire. Make sure that the stripped portion is not greater than 3/16".




**6** Loosen (Do Not Remove) the M4 set screw with the provided 2mm Allen wrench.




**7** Remove the M3 set screw with the provided 1.5mm Allen wrench.

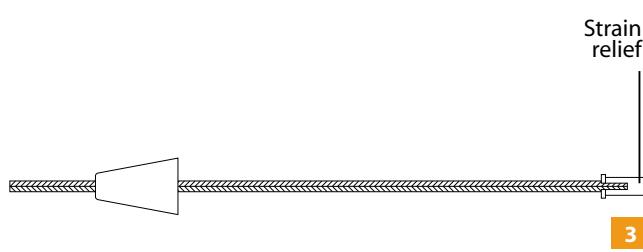


**3** Insert the coaxial cable through the flared end of the strain relief.

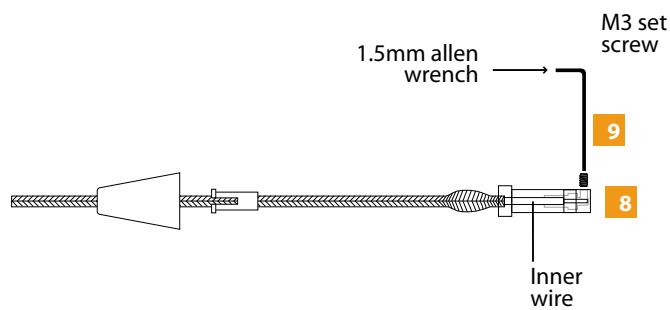



**8** While inserting the inner wire into the connector look through the set screw hole to make sure that the stripped portion of the inner wire contacts end of the connector.

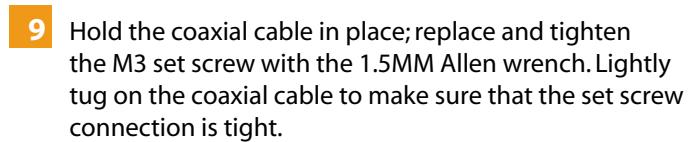

**9** Hold the coaxial cable in place; replace and tighten the M3 set screw with the 1.5MM Allen wrench. Lightly tug on the coaxial cable to make sure that the set screw connection is tight.

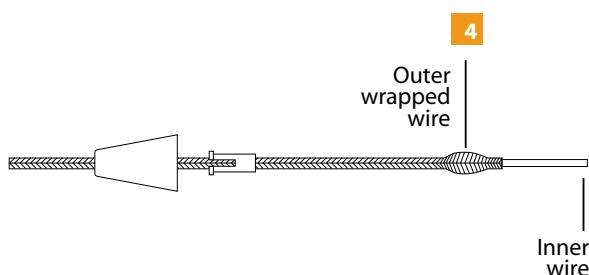

**4** Slide the outer wrapped wire back to expose the inner wire.

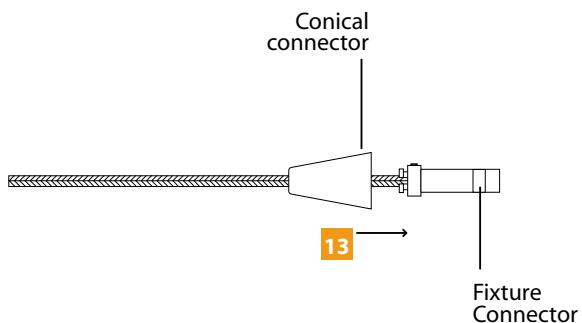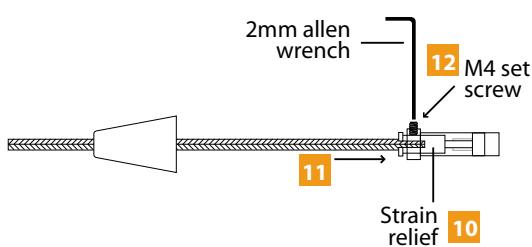

**10** The strain relief slots should be rotated 90° away from the M4 set screw.

**11** Slide and push the strain relief completely into the connector. This will force the outer wrapped wire to be inserted into the connector.

**12** Tighten the M4 set screw with the 2mm allen wrench so that the strain relief holds the outer wrapped wire in place.

**13** Slide the conical connector over the fixture connector.

To install the fixture, refer to the instructions provided with the system.

**SAVE THESE INSTRUCTIONS**