




1 Install lamp.

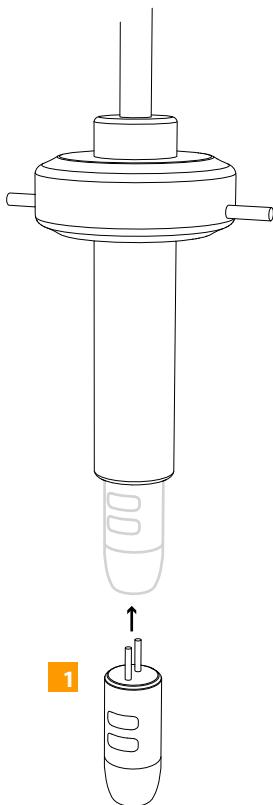

3 Once the fitter is inside of the top opening, rotate until the holding posts allow the lamp to sit center of the glass.

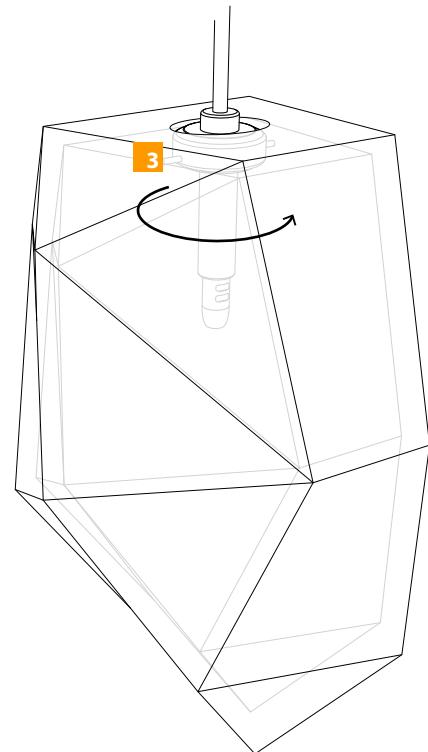


2 Slip fitter into top opening of glass at an angle.

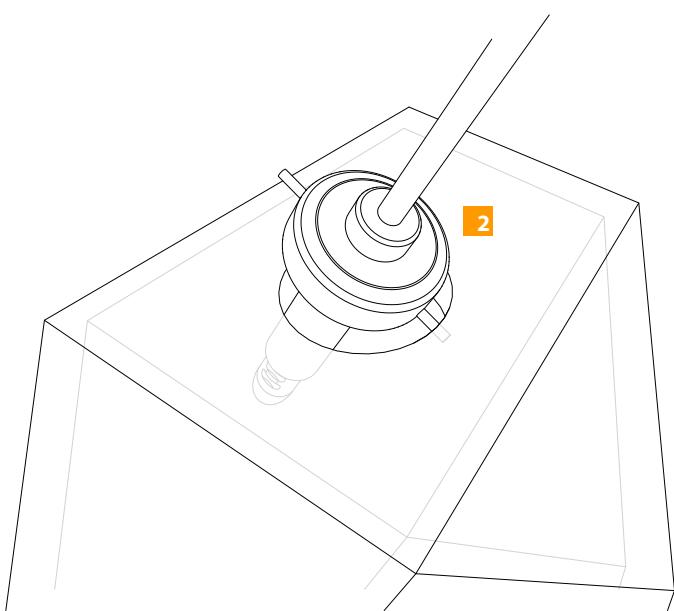


EZ Jack Installation Instructions

4 Insert the fixture coaxial cable through the conical connector

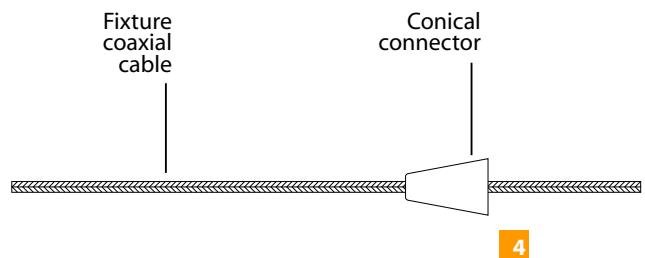


**SAVE THIS
INSTRUCTIONS**

5 Insert the coaxial cable through the flared end of the strain relief.

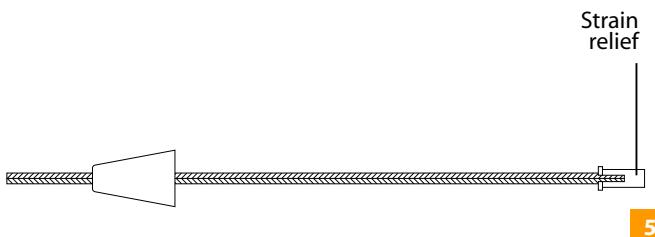


6 Slide the outer wrapped wire back to expose the inner wire.

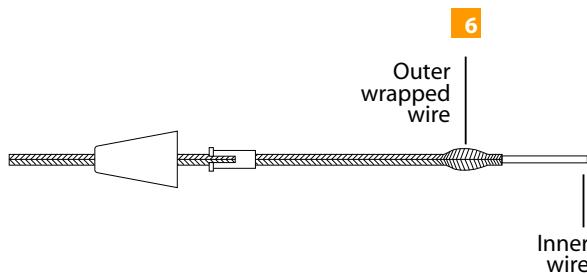

7 Strip 1/8" from end of the inner wire. Make sure that the stripped portion is not greater than 3/16".


8 Loosen (Do Not Remove) the M4 set screw with the provided 2mm Allen wrench.

9 Remove the M3 set screw with the provided 1.5mm Allen wrench.

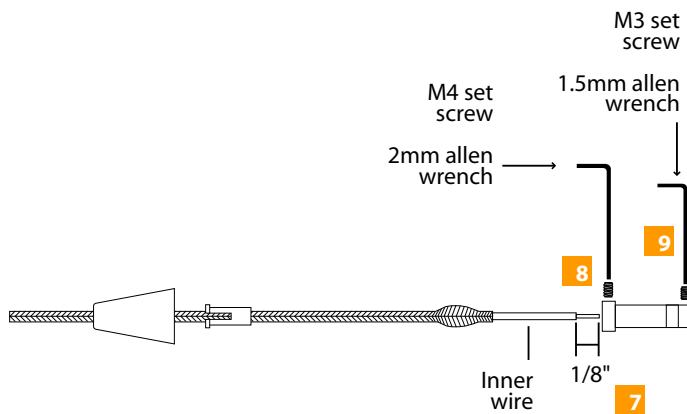

10 While inserting the inner wire into the connector look through the set screw hole to make sure that the stripped portion of the inner wire contacts end of the connector.

11 Hold the coaxial cable in place; replace and tighten the M3 set screw with the 1.5MM Allen wrench. Lightly tug on the coaxial cable to make sure that the set screw connection is tight.

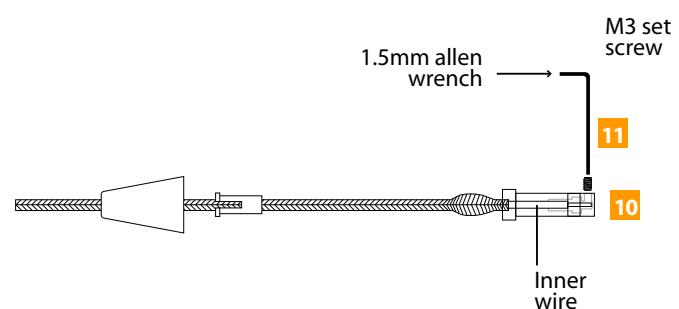

**SAVE THIS
INSTRUCTIONS**