



1 Unscrew glass to expose mounting screws.

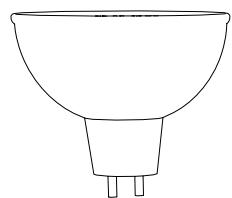


2 Unscrew mounting screws.

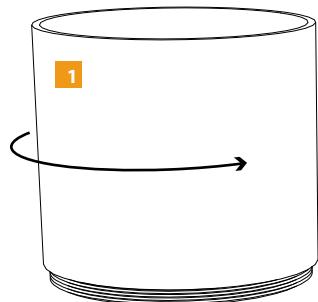

3 Detach universal Cross bar.


4 Using wire nuts connect the hot and neutral 120Vac to the black and white wires of the fixture, also connect the ground wire to Jbox.

5 Secure the universal cross bar to the Jbox.

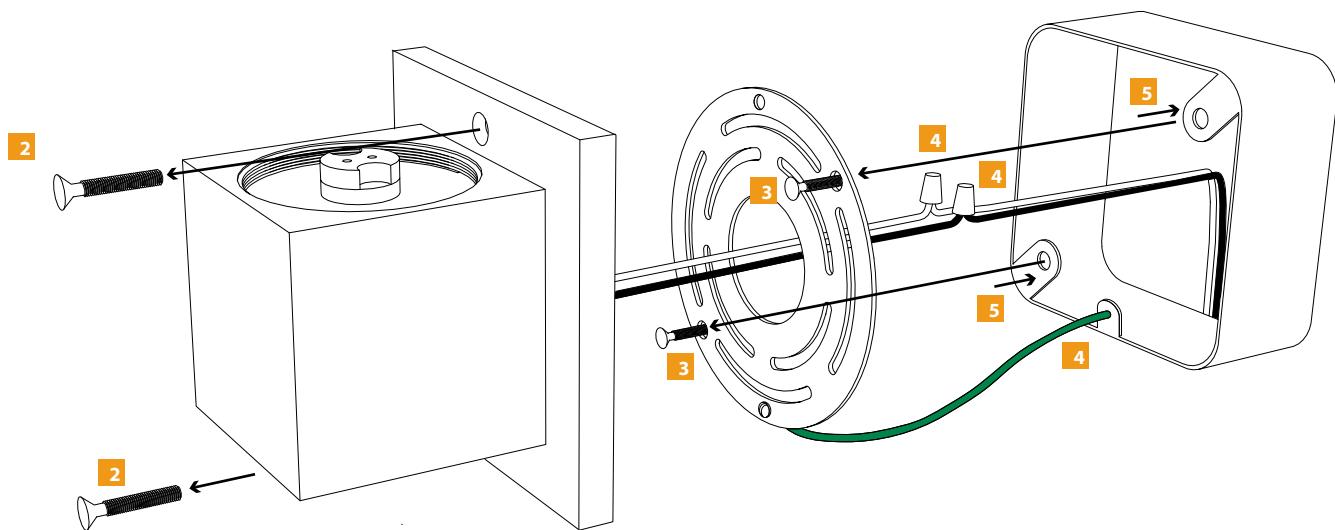


Installation Instructions for Block Wall (WS013)

6 Attach universal Cross Bar with two short screws (included).

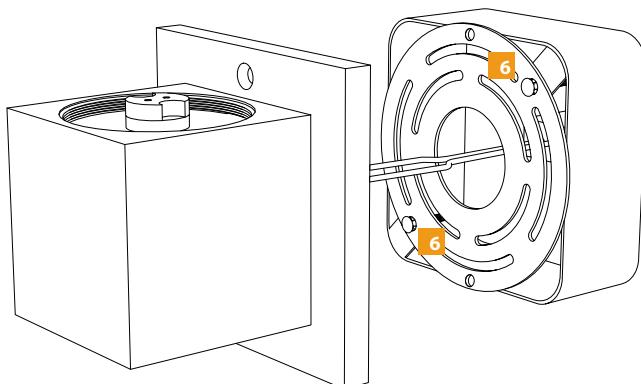


11 Install the diffuser over the bulb, be careful not to cross thread.

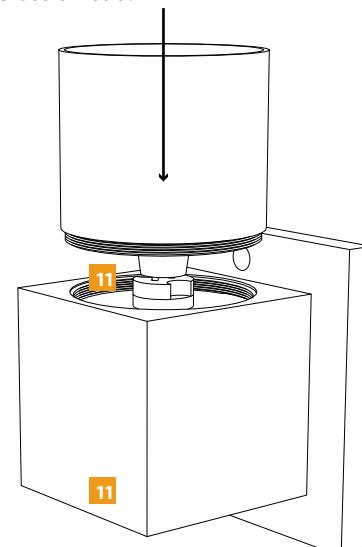


7 Orient Cross Bar with holes at 0° and 180° degrees.

8 Mount fixture with screws that were originally obscured by glass upon unpacking.


9 Tighten body till snug

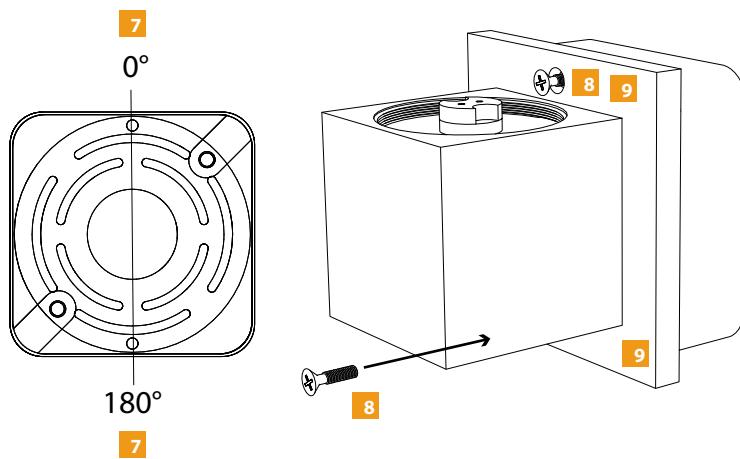

12 Gently screw glass back in clockwise until fully seated.

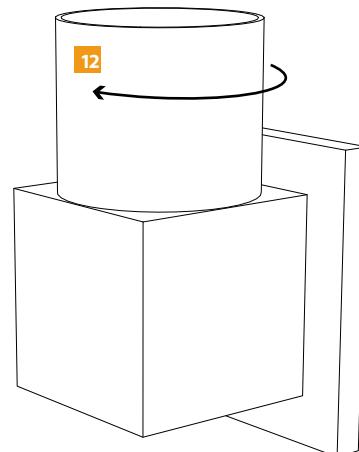

10 **IMPORTANT:**
BULBS TO BE INSERTED INTO GLASS END AND BULB PINS SEATED COMPLETELY INTO LAMPHOLDER BEFORE SCREWING GLASS BACK IN PLACE.

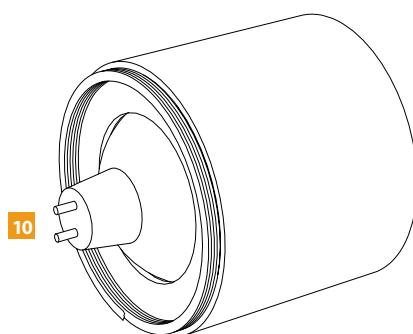

13 Power Luminaire.

SAVE THIS INSTRUCTIONS