


SAVE THESE INSTRUCTIONS



CAUTION: RISK OF FIRE:

Never replace a Xenon (Xelogen) lamp with a regular Halogen lamp. A regular Halogen lamp requires a protective glass shield.


This product is ETL listed and suitable only for indoor dry locations and approved for use at any height above the finished floor.

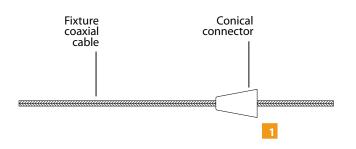


1 Insert the fixture coaxial cable through the conical connector




Insert the coaxial cable through the flared end of the strain relief.

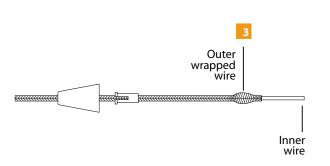

3 Slide the outer wrapped wire back to expose the inner wire.

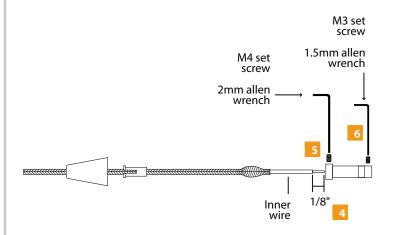


- 4 Strip 1/8" from end of the inner wire. Make sure that the stripped portion is not greater than 3/16".
- 5 Loosen (Do Not Remove) the M4 set screw with the provided 2mm Allen wrench.
- 6 Remove the M3 set screw with the provided 1.5mm Allen wrench.

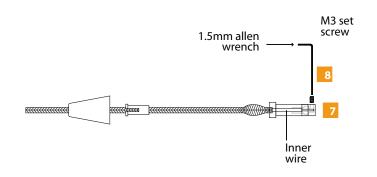


- While inserting the inner wire into the connector look through the set screw hole to make sure that the stripped portion of the inner wire contacts end of the connector.
- 8 Hold the coaxial cable in place; replace and tighten the M3 set screw with the 1.5MM Allen wrench. Lightly tug on the coaxial cable to make sure that the set screw connection is tight.



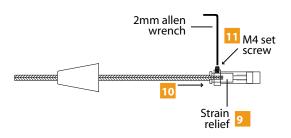

- 9 The strain relief slots should be rotated 90° away from the M4 set screw.
- 10 Slide and push the strain relief completely into the connector.

 This will force the outer wrapped wire to be inserted into the connector.
- 111 Tighten the M4 set screw with the 2mm allen wrench so that the strain relief holds the outer wrapped wire in place.

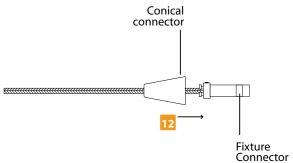

12 Slide the conical connector over the fixture connector.

To install the fixture, refer to the instructions provided with the system.

SAVE THESE INSTRUCTIONS

WARNING: RISK OF FIRE

Never replace a Xenon (Xelogen) lamp with a regular Halogen lamp. A regular Halogen lamp requires a protective glass shield.